

# Haier



## Transport cooler Operation Manual

Model  
HZY-8ZA  
HZY-15ZA

Certificate of Quality

checker:



Manufacturer: Qingdao Haier Biomedical Co., Ltd.  
Address: Haier Industrial Park, Economic Technology Development  
Zone, Qingdao P.R. China  
Web: [www.haiermedical.com](http://www.haiermedical.com)  
Revision Date: 07/2020  
Version: 1st, 2020  
Dedicated code: 027050  
V13026

- Please read this manual carefully before using.
- Our company reserves the right to interpret the operation manual.
- The appearance of product is subject to material object.
- Please keep it properly with the invoice after reading.
- This product is subject to technology or software upgrade without further notice.
- Translation of the original instruction.



 

 
## Content













Content .....	2
Safety Precautions .....	1
Precautions for Use .....	3
Product features .....	4
Product installation .....	5
Name of Parts • Control panel .....	9
Method of Use .....	11
Maintenance .....	18
Q&A .....	19
Wiring diagram .....	20
Specifications .....	21

## Safety Precautions

Dear users:

Thank you for use of Transport Cooler. For better understanding of this operating manual and use of this product, and for preventing personal injury and damage to articles, please read the manual carefully and observe the contents marked with the following signs in this manual.

 <p>Under all conditions marked with "⚠", it is necessary to refer to the documentation, so as to clarify the nature of potential risks and any countermeasures that must be taken.</p>	 <p>Conduct or operation that must be forbidden</p>
 <p><b>Warning</b></p> <p>Failure to observe the matters under the warning signs may cause serious casualty accident.</p>	 <p>Conduct or operation that must be observed</p>
 <p><b>Caution</b></p> <p>Failure to observe the matters under the caution signs may cause casualties or freezer damage and associated property loss.</p>	

-  Close down the gas leaking valve and open the door and windows for ventilation in case of leakage of inflammable gas like coal gas, etc., and do not plug or pull out the power plug of the Transport cooler. Otherwise, it may trigger an explosion and fire.
-  Make sure to place the Transport cooler firmly on a solid and flat ground. If the ground is not stable or it is not properly placed, it may cause overturn of the Transport cooler or personal injury.
-  Please use the dedicated power supply indicated on the nameplate of the freezer. Otherwise, it may cause a fire or electric shock.
-  If the service voltage is lower than 198V or higher than 242V, it is required to additionally install an automatic manostat suitable for electromotor load.
-  If it is required to lengthen the power cord, the section area of the lengthened cord must not be less than 2mm<sup>2</sup> and the length shall not be longer than 3m. Otherwise, a fire or electric shock may possibly be caused.
-  The power cord of this refrigerator is provided with a three-wire (grounding wire) plug, complying with the standard 10A three-wire (grounding wire) socket. Never cut or remove the grounding plug foot of the power cord in any case. Make sure that the power plug and socket is inserted tightly and reliably. Otherwise, it may result in a fire hazard.
-  Please use power supply socket with grounding wire for fear of electric shock.
-  If the power socket is not grounded, make sure that grounding wire will be installed by a professional technician.
-  Do not use the Transport cooler in the open air. When the refrigerator gets wet in the rainwater, leakage of electricity or electric shock may possibly be caused.
-  Do not place the Transport cooler in a damp site or a place where it may be vulnerable to sprayed water. Otherwise, leakage of electricity or electric shock may be caused due to degeneration of its insulation.
-  Do not pour water onto the Transport cooler in a direct inclined way. Otherwise, it may cause an electric shock or a short circuit.
-  Do not place any vessel containing water or any heavy object on the Transport cooler. If the object falls off, it may possibly cause personal injury and the flowing water may degenerate the insulation and further cause leakage of electricity or electric shock.

- ⊘ Do not ground the Transport cooler via gas pipe, power supply conduit, telephone line or lightning rod. The abovementioned grounding connection may cause an electric shock or other dangers.
- ⊘ Do not contact any electric parts or any switches such as power plug and so forth with a wet hand. Otherwise, an electric shock may possibly be caused.
- ! When pulling out a plug from the power socket, hold the power plug firmly but do not pull the wire of the power plug. If you pull the electric cord by hand, it may possibly cause an electric shock or lead to a fire due to short circuit.
- ! If the Transport cooler runs out of order, please pull out the power plug. Continuous running in an abnormal condition may cause an electric shock or fire.
- ! Users must not remove, repair or refit the Transport cooler by themselves. Otherwise, a fire or personal injury due to improper operation may possibly be caused.
- ! Before conducting any repair or maintenance of the refrigerator, make sure to disconnect the power of the Transport cooler for fear of electric shock or personal injury.
- ! Make sure not to suck in medicine or suspended particles inside and surrounding the Transport cooler in time of repair and maintenance. Otherwise, they may possibly bring hazard to your health.
- ! When storing toxic, hazardous or radioactive articles, please use the Transport cooler in a safe zone. If used improperly, it may bring damage to physical health or environment.
- ! Pull the plug of Transport cooler when it will be out of service for a long time, so as to prevent electric shock, leakage of electricity, or fire due to the aging of the power cord.
- ! If the Transport cooler is left unused for a long time in an unattended area, make sure that children will not approach the Transport cooler and the box door cannot be closed completely.
- ! Disposal of the discarded Transport cooler shall be conducted by relevant persons. This equipment contains reusable materials and shall be disposed of properly - not simply discarded with unclassified household waste. Appliances that are no longer to be used must be disposed of in a professional and appropriate manner in accordance with current local laws and regulations.
- ⊘ Do not store corrosive articles such as acid, alkali etc. in the Transport cooler. Otherwise, it may cause damage to the internal components or electric parts of the Transport cooler.
- ⊘ Do not place the packing plastic bags at the locations where children can easily take as plastic bags may possibly cause occurrence of suffocation accident.
- ⊘ Do not climb onto the Transport cooler or place articles on it. Otherwise, personal injury or damage of Transport cooler may be caused due to the overturn of the Transport cooler.
- ⊘ Do not insert any metal objects like iron nails, iron wire into any orifice and gap or any air vent used for internal air circulation of the Transport cooler. Otherwise, it may cause an electric shock or injury due to contact of the above objects with the moving parts.
- ! When restarting the Transport cooler after a power failure or power-off, it is required to check the setting of the Transport cooler. Change of settings may cause damage to the articles stored.
- ! Put on your gloves at time of maintenance so as not to bump the sharp edges or corners, which may result in personal injury.
- ! When moving the Transport cooler, please be careful not to trip over it, preventing damage to the Transport cooler or casualties.
- ⊘ Do not use any electric appliance in the store-room of the Transport cooler except for the types that the manufacturer recommended for use.

## Packing list

Name	HZY-8ZA
Operating manual	1
Installation confirmation letter	1
Warranty certificate	1
Plastic bag	1
Power adapter	1
Name	HZY-15ZA
Operating manual	1
Installation confirmation letter	1
Warranty certificate	1
Plastic bag	1
Power adapter	1
IC Card	2

Name	Transport cooler
Model	HZY-15ZA
External dimensions (W x D x H) (mm)	520×300×270
Internal dimensions (W x D x H) (mm)	430×150×180
Insulating material	Hard polyurethane foam
Cooling mode	Semiconductor active refrigeration
Casing/liner	ABS/aluminum plate
Temperature control mode	Computer control system
Net weight	6kg
Range of temperature in storage/transport	2°C ~6°C /2°C ~10°C
Rated power supply	220V (can be connected to 12V cigarette lighting plug)
Rated power	95W
Power Consumption	1.7kW•h/24h
Alarm type	Overtemperature alarm, sensor fault alarm and power off alarm
Temperature and humidity cold chain monitoring function	Standard configuration
Power-off temperature keeping time	2 hours (at 28°C environmental temperature with load)
Chargeable battery	Chargeable lithium battery
NFC clock-in function	None
Production date/Software release version	See bar code on the case body/V1

Note: Our company pays attention to technological innovation. Products are subject to upgrade without further notice.

## Precautions for Use

- Structure and composition: The product consists of insulation cabinet, refrigeration system, control system (including alarm system), data recording system and so on.
  - When restarting the Transport cooler after it has not been used for a long time, the test battery may possibly be at low level. After it is connected with power supply, the lithium battery can be charged and it can be fully charged after Transport cooler's working for continuous 5 hours.
  - The indicated temperature value of the Transport cooler is the value indicated at the temperature sensing probe inside the Transport cooler. Occasionally there is a certain difference between the indicated temperature and the actual temperature in the central part of the Transport cooler, but it will gradually approach to the true temperature.
  - Use the diluted neutral detergent to clean the refrigerator. Do not use brushes, acid, gasoline, soap powder, polishing powder or hot water to clean the Transport cooler as the above-mentioned materials may damage the painting surface as well as the plastic and rubber parts and components. Take particular care not to use volatile solvent such as gasoline to wipe plastic and rubber parts and components.
  - Cut off the power of the Transport cooler when it will be out of service for a long time.
  - Every time when putting in and taking out the articles, please try to reduce the door opening time so as not to cause relatively large fluctuations of the temperature and humidity inside the heating box.
  - After the door is opened, the temperature inside the refrigerator will rise steeply in a short time. This is normal and the temperature will restore within one hour after the door is closed.
  - Semiconductor is used in the transfer box for refrigeration. Compared with compressor refrigeration products, the cooling time is longer.
  - The basic performance of the EMC test: the basic performance of the transfer box is that the refrigeration system works normally to realize the box cooling, and the data recording system (if any) and the identification system (if any) can normally achieve the corresponding functions.
  - In the alarm state, there should be a buzzer sound and/or light flashing and/or screen display.
- EMC requirements:
- a) The equipment complies with the emission and immunity requirements specified in GB/T18268.1.
  - b) This equipment is designed and tested according to the Class A equipment in GB4824. In a home, this equipment may cause radio interference, and protective measures are required.
  - c) It is recommended to evaluate the electromagnetic environment before using the equipment.
  - d) It is forbidden to use the device near strong radiation sources (such as unshielded video sources), otherwise it may interfere with the normal operation of the device.

## Product features

Main use: The box inside temperature is controlled within a certain range for temporary storage of articles by semiconductor refrigeration, which can be used for transshipment of blood, drugs, specimens, reagents and other biological products.

### 1. Temperature Control

- The storage temperature in the box can reach 2~6℃ , and the transport temperature range is 2~10℃ during the temperature keeping time.
- Computer board control, control and display dual sensors, temperature display accuracy of 0.1℃ .

### 2. Safety System

- Multiple fault alarms (high-low temperature alarm, sensor fault alarm, and power off alarm)
- Two modes alarms (sound buzzer and display flicker alarm)
- The backup battery design allows real-time display of the temperature in the box even after power failure.
- Double lock structure at the door body can prevent the opening of door body at will and ensure the safety of storage items.

### 3. Refrigeration System

- Semiconductor active refrigeration
- PCM cold storage material ensures zero freeze and long thermal insulation.
- Imported famous brand fans.

### 4. Intelligent management

- Temperature and humidity data can be uploaded to the CCMS cold chain monitoring and management platform in real time via 4G, and can be queried anytime.
- Storage identification, it can automatically identify whether there is something in the box, to prevent something left.
- GPS positioning, in an open area, users can check its movement track.

The above functions are not available for all models. The specific functions are subject to the equipment you purchase.

The Haier transport cooler you obtained is probably not exactly the same as that illustrated in the Operation Manual due to continuous improvement of product. We are sorry for this. Description Content of the user's manual is subject to alternation without further notice.

## Specifications


### Specifications

Name	Transport cooler
Model	HZY-8ZA
External dimensions (W x D x H) (mm)	300×265×260
Internal dimensions (W x D x H) (mm)	230×140×170
Insulating material	High-density foam
Cooling mode	Semiconductor active refrigeration
Casing/liner	ABS/aluminum plate
Temperature control mode	Computer control system
Net weight	3.5kg
Range of temperature in storage/transport	2℃ ~6℃ /2℃ ~10℃
Rated power supply	220V (can be connected to 12V cigarette lighting plug)
Rated power	60W
Power Consumption	1.2kW•h/24h
Alarm type	Overtemperature alarm, sensor fault alarm and power off alarm
Temperature and humidity cold chain monitoring function	Standard configuration
Power-off temperature keeping time	2 hours (at 28℃ environmental temperature with load)
Chargeable battery	Chargeable lithium battery
Production date/Software release version	See bar code on the case body/V1


Note: Our company pays attention to technological innovation. Products are subject to upgrade without further notice.

## Wiring diagram

### •HZY-8ZA

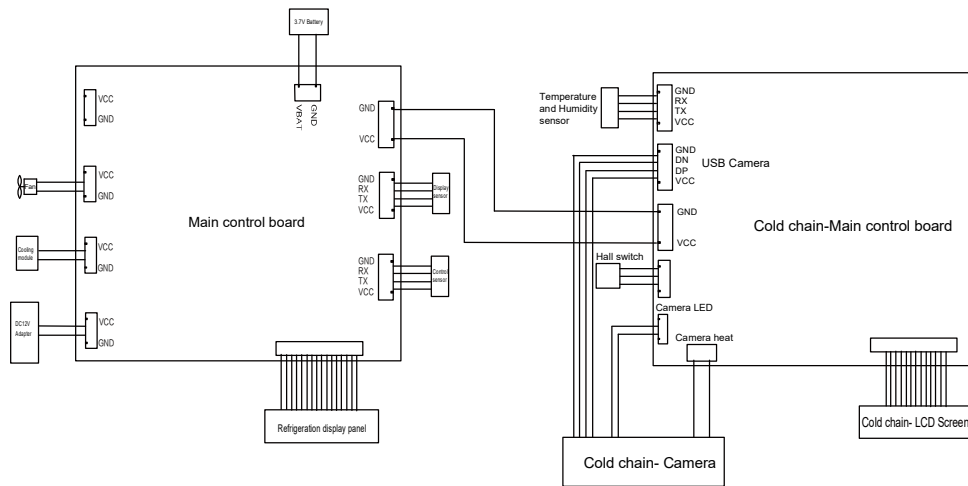

### •HZY-15ZA

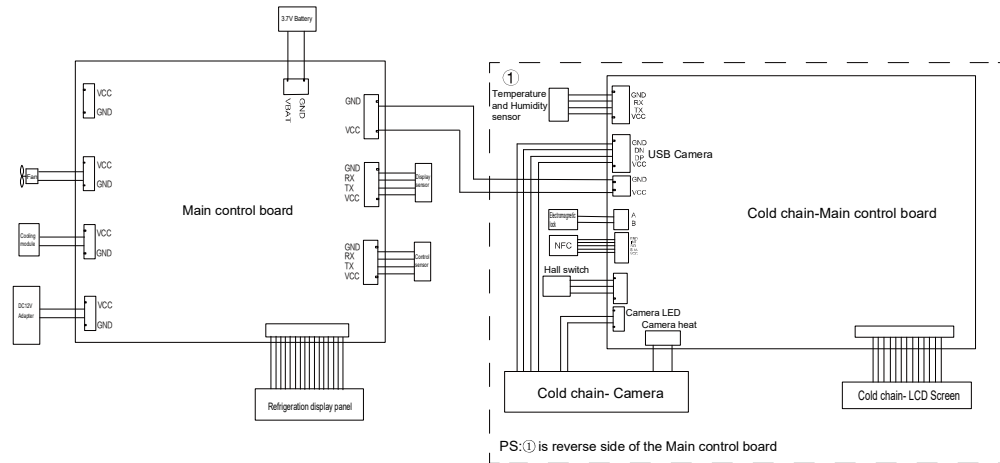

## Product installation

### ■ Installation environment

- Environmental temperature: 10 to 28 °C . Air conditioning system shall be used when necessary.
- Ambient humidity: below 85% RH.
- Avoid large quantities of dust.
- Avoid mechanical sway or vibration.
- The altitude of Transport cooler's working position: lower than 2000m.
- Input voltage: supports 12V and 220V switching.

- ⚠ Caution**
- As the Transport cooler is sensitive to the environmental temperature, the Transport cooler cannot operate normally if it is installed in an environment other than the above-mentioned environment. Please use it after improving the environment.
  - It is prohibited to install the Transport cooler in an open-air environment. When the Transport cooler gets wet in the rainwater, leakage of electricity or electric shock accidents may possibly be caused.

### ■ Installation place

For normal operation and optimum performance level of the Transport cooler, its installation place shall

conform to the following conditions:

- It cannot be installed in a narrow, small, and airtight space. It shall at least be guaranteed that the product can be moved in/out normally so as to avoid any maintenance difficulty and failure. The failure of in-time repair may cause damage to the stored articles.
- The ground at the installation place shall be solid and flat.
- The place shall be well-ventilated without exposure to direct sunshine.
- Do not share a socket with other equipment, the plug and socket shall be firmly connected.
- Do not distort nor stress the power cord.
- If it is required to lengthen the power cord, the section area of the lengthened wire shall not be less than 2mm<sup>2</sup> and the length shall not be longer than 3m.
- Check the operating voltage before use and consider to use manostat suitable for the electromotor load to stabilize the voltage at areas where the voltage is not stable.
- It shall be guaranteed that the Transport cooler is reliably grounded.
- If the power socket has grounding wire, check if the grounding connection is good before use.
- If the socket is not equipped with a grounding wire, make sure that it will be installed by the professional engineering technical personnel.
- It shall be away from the radiated area. Avoid the use of radiation-sensitive devices at its periphery.

- ⚠ Warning**
- Do not ground the Transport cooler via gas piping, water supply pipe, telephone line or lightning rod, which may easily cause an electric shock.
  - After installation, the power plug must be accessible to pulling the plug conveniently in emergency. No articles shall block out the air vent of the Transport cooler.

## Pre-use preparation

1. Take down all the packing material and packing straps: take down all the packing material and packing straps used for transportation.
2. Check the accessories delivered with the product: Please check the articles inside the packing box as per the packing list, and contact the after-sale service in time in case of any discrepancy.
3. Placement conditions: Select the appropriate distance according to the space size.
4. Observation: after leveling and cleaning the body, switch on the power to ensure the normal operation of the Transport cooler.

## Q&A



Any doubt in course of service ? Any doubt if any Transport cooler fault occurs ? Please look here first.

 
This chapter provides answers to a wide range of possible symptoms and corresponding solutions.

If the problems remain unsolved after operation, please contact Haier for after-sale service. Please do not maintain and disassemble the Transport cooler by yourself.

Fault	Trouble shooting scheme
The Transport cooler is not working	Check if the input power supply complies with the requirement.
	Whether the plug and socket are in poor contact
	Whether the input and control line has any fault
	Whether the voltage is too low
The Refrigerating effect is not obvious with temperature exceeding the standard	Whether excessive or overheated articles are stored
	Whether there is a certain gap between the stored articles
	Whether there is direct sunlight or other radiation from heat source
	Whether the door is opened frequently
	Whether the environmental temperature is too high?
Excessive noise	Whether the air duct is blocked
	Whether the Transport cooler is stably placed
	Whether any part of the box body contacts any foreign object or wall
The buzzer gives an alarm.	The noise indicated in the technical data is the average data measured at 1m apart from the surface in a noise-free standard laboratory with the no articles stored in Transport cooler on the rubber mattress and the Transport cooler runs steadily with door closed, but excluding start-up and shut-down. In course of use, it is normal that there is the difference between the actual noise and the value indicated due to the effect of the articles stored, environment noise, and unclosed door, etc.
	Whether the articles are just stored and the temperature is not stabilized; it will be eliminated automatically after a period of cooling.
	Whether it is the alarm of overtemperature as the door is not tightly closed
	Whether the temperature exceeds the standard



## Maintenance



### Warning

•In order to prevent an electric shock or casualties, please make sure to cut off the power of the Transport cooler before conducting any repair to the Transport cooler.

•Make sure not to inhale medicine or suspended particles around the storage box when maintaining the Transport cooler. Otherwise, there may be health risk.

#### 1.Clean transport cooler

•Clean the Transport cooler once a month. Regular cleaning can keep a completely new appearance of the Transport cooler.

•Use a piece of dry cloth to wipe off the small amount of dust accumulated on the Transport cooler's housing and inner chamber and all the accessories as well. If the Transport cooler is very dirty, use a piece of cloth dipped with mild detergent to clean off the dirt, then use a piece of wet cloth to wipe the residual detergent, and wipe it with a dry piece of cloth.

•Do not pour water onto the Transport cooler enclosure or into the Transport cooler. Otherwise, damage to electrical insulation may result in faults.

•The compressor and other machinery parts are in completely sealed state, so there is no need to lubricate them.

#### 2.Stop using Transport cooler

•Power off the Transport cooler if it will be out of service for a long time.

•Open the door of the Transport cooler and thoroughly clean the Transport cooler.

•After the Transport cooler is aired, close the door of the box and put the plastic bag on it for sealing storage.

## Initial power-on

Please observe the following rules when conducting initial start-up and continuous running:

Connect the power cord to the dedicated socket of proper specification when the cooler is empty.



This Transport cooler is preset to run at below  $4 \pm 2^{\circ}\text{C}$  before factory delivery, so there is no need to set up the temperature.If you need to adjust the temperature, please contact professionals for operation.



The sound alarm will ring under overtemperature after power-on and this is normal.At this time, press any key (press Function or Return key of cold chain module) and the buzzer alarm sound will be cancelled.If the alarm condition is not relieved after the default 30 minutes, the sound alarm will work again until the temperature sensor reaches the range of  $2-10^{\circ}\text{C}$  .



The temperature can be stabilized within the set temperature range only after the Transport cooler has been running for a period of time.



Start putting articles gradually into the transport cooler after completing a thorough inspection of the Transport cooler.

- This product should be responsible by an especially assigned person who regularly checks the operation and keeps record to ensure the normal operation of the Transport cooler.
- It is strictly prohibited to put too many relatively overheated items in the Transport cooler at one time, which will cause slow temperature drop.
- Inside the Transport cooler, do not use the electric appliance without production permission.


## Operation after a power failure

The transport cooler has a memory function for the set value. When the power restores after failure, the transport cooler will continue to operate according to the set parameters before the last power failure.


- Warning**
- Pull out the power plug when the Transport cooler will be out of service for a long time so as to prevent electric shock, leakage of electricity or fire due to aging of the power cord.
  - If the Transport cooler is left unused for a long time in an unattended area, make sure that children will not approach the freezer and its door cannot be closed completely.



After entering the password, select "Input", press and hold the "function" key for 3 seconds, and the word "start authorization" appears

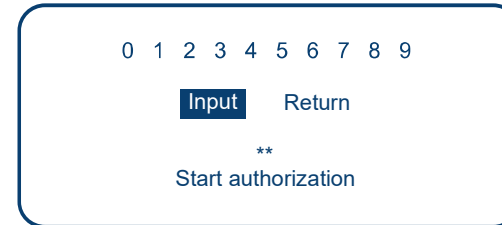

The user sticks the IC card to the NFC recognition area. After the buzzer beeps twice, "Start Authorization" turns into "Successfully".

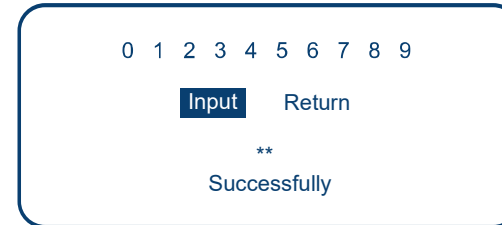


- Caution** The same device can authorize multiple IC cards at the same time. You can also select "Clear Authorization" in the authorization interface to clear all authorized IC cards.


## Network description (HZY-8ZA/15ZA)

1. Network
  - 4G
2. Transmission protocol
  - Communication part: adopt standard http protocol and websocket protocol.
3. Server
  - CCMS cold chain monitoring and management system.


8. NFC setting

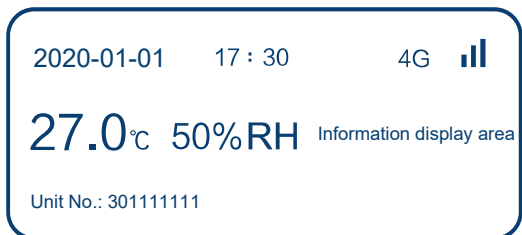


Long press and hold the "Function" key for 3 seconds to access the level-1 submenu, short-press the "Back" key and select "NFC Setting", and press and hold the "Function" key for 3 seconds to access the level-2 submenu

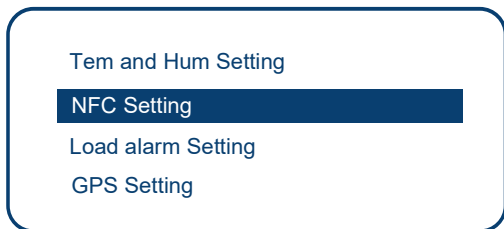

Long press and hold the "Function" key for 3 seconds to access the authorization interface

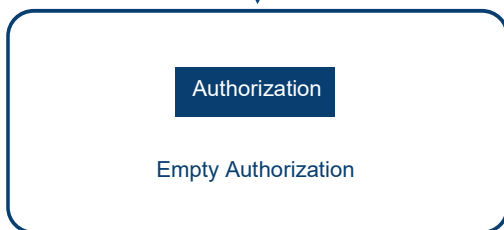

Long press and hold the "Function" key for 3 seconds to enter the password authorization interface. The default authorization password is 23.

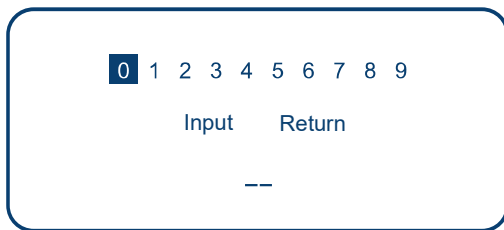

## Name of Parts • Control panel

### Name of Parts

•HZY-8ZA



•HZY-15ZA



## Control panel

•HZY-8ZA



•HZY-15ZA




## 7. GPS setting


In this interface, if the movement track of the transfer freezer needs to be queried through the cloud platform, the user can manually turn on the GPS trip switch. This switch is off by default (Note: GPS needs to be used by connecting with 4G network).



Long press and hold the "Function" key for 3 seconds to access level-1 submenu, short press the "back" key and select "GPS trip", and press and hold the "function" key for 3 seconds to access level-2 submenu

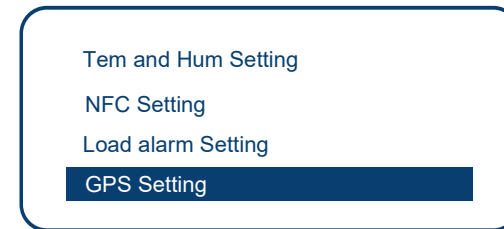


Long press and hold the "Function" key for 3 seconds to turn on the GPS trip switch

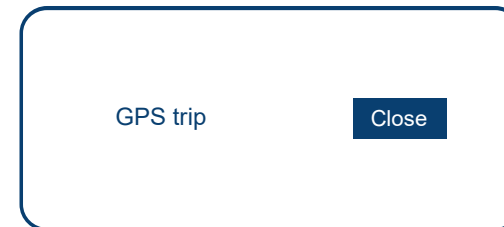


## 6. Storage reminder setting

Under this interface, the user can turn on the storage reminder switch and set the reminder time to prevent the storage items in the transfer freezer from being forgotten to cause waste. The storage reminder switch is off by default.

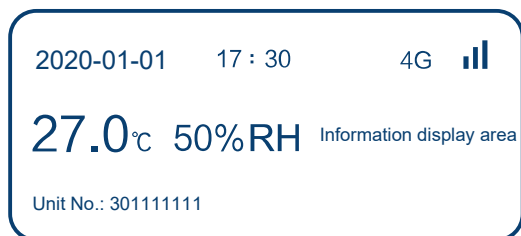


Long press and hold the "Function" key for 3 seconds to access the level-1 submenu, short press the "Back" key and select "Load alarm Setting", and long press and hold the "Function" key for 3 seconds to access level-2 submenu

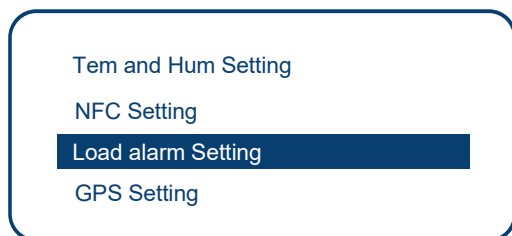

Long press the "function" key for 3 seconds, the storage reminder switch is turned on, short press the "back" key to select the storage reminder time setting (adjustable time is 1-24 hours), and set the storage reminder time as needed.

After the storage reminder switch is turned on, if there is still storage inside the transfer freezer within the setting reminder time, the cold chain module will emit the buzzer alarm. Press the "function" or "back" key to temporarily cancel the buzzer alarm. If the storage is still not removed within the setting reminder time, the buzzer alarm will start again.

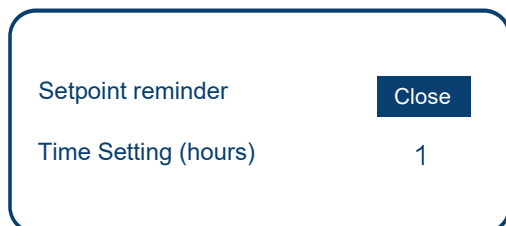

## Method of Use

### Temperature display module

#### •Overtemperature alarm function

This product has the over-temperature alarm function. The upper limit of the high-temperature alarm is 10 °C by default, and the lower limit of the low-temperature alarm is 2 °C by default. If the temperature exceeds this range, the buzzer will sound for alarm. At this time, press any key on the left screen to cancel the buzzer alarm (press the "Function" or "Back" button on the right cold chain screen to cancel the buzzer). After 30 minutes by system default, the buzzer will start again if the alarm condition is not eliminated.

#### •Adjust the set temperature

Long press the "Set" key for 10s and the temperature display window in the left box shows the "St". Press the "Set" key again and it displays the setting temperature value. Press the "+" or "-" key to adjust setting temperature value. After completion and 10s no operation, the system saves the set temperature value, and automatically exits the main interface.

#### •Power failure prompt function

After the power is cut off, the brightness of the temperature display window in the left box becomes dark, and at the same time, the temperature value on the left side will be displayed at a certain frequency (10 seconds On and 3 seconds Off), indicating that the product is in a power-off state. Please transport the product to the place where it is needed during the period of power cut and thermal insulation.

#### •Backup Alarm & display: User Control

When the power is off, press the "set" and "add" buttons for 5 seconds at the same time, the left screen appears off, and the transport cooler will turn off.


#### •Restore factory settings

This product does not need to adjust other parameters. If the parameters are confusing due to incorrect operation, please refer to the following operation mode to restore the factory settings. Press and hold the "+" button and the "-" button for 20s, the system parameters will be restored to the default value, and the temperature display window in the left box will display "CL".

### Temperature and humidity cold chain module

#### 1. Home page

After booting, the following home page will be displayed.

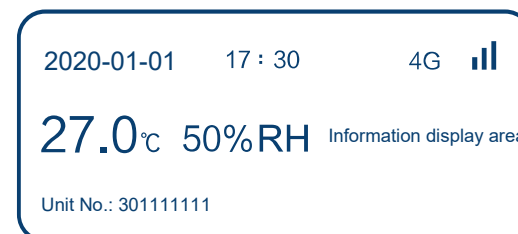

- 27.0°C : the current temperature in the freezer.
- 50%: the current humidity in the freezer.
- Information display area: displays 4 states: "open", "close", "empty" and "loaded".
- Equipment number: the machine number of this equipment.

## 2. Level-1 submenu

In the "Home" interface, press and hold the "Function" key for 3 seconds to access the level-1 submenu. Users can set the level-1 submenu according to their needs. If there is no operation in any submenu interface within 15 seconds, it will return to the main menu.

Level-1 submenu: temperature and humidity setting, temperature and humidity records, network settings, Wi-Fi setting, bluetooth printer setting, NFC setting, storage reminder setting, and GPS setting.

## 3. Description of keys

- "Function" key: long press for 3 seconds to confirm the function and short press is for "up".
- "Back" key: long press for 3 seconds for return and short press is for "down".

## 4. Upload to cloud platform


The temperature and humidity data of the transfer freezer, the status of the door opening and closing, and the storage status can be uploaded to Haier cloud platform.

采样时间	所属部门	对象名称	监控对象状态	监控点	上下限	实时温度	实时湿度	对象类型	冷链编号
2018-06-06 15:40:00	青岛市中心血站-血站	鲁E666黑色小转运箱	正常	1路	-100°C ~100°C	23.3°C	/	冷藏车	8000025A
2018-06-06 15:40:00	青岛市中心血站-血站	鲁E666黑色小转运箱	正常	2路	-100°C ~100°C	23.4°C	/	冷藏车	8000025A
2018-05-31 13:40:00	青岛市中心血站-血站	鲁E555蓝色转运箱	闲置	1路	/	/	/	冷藏车	8000024A
2018-05-31 13:40:00	青岛市中心血站-血站	鲁E555蓝色转运箱	闲置	2路	/	/	/	冷藏车	8000024A
2018-06-07 12:10:00	青岛市中心血站-血站	鲁B111黑色大转运箱	正常	1路	-100°C ~100°C	7.9°C	/	冷藏车	8000024B
2018-06-07 12:10:00	青岛市中心血站-血站	鲁B111黑色大转运箱	正常	2路	-100°C ~100°C	7.9°C	/	冷藏车	8000024B

**Caution** The NFC punch in record needs to be checked on the door opening record of the transfer freezer after the card information is maintained on the cloud platform.

## 5. Temperature and humidity setting

In the homepage state, long press and hold the "function" key for 3 seconds to access the level-1 submenu. The first one in the level-1 submenu is "temperature and humidity setting". After selecting "temperature and humidity setting", long press "function" key for 3 seconds to access the level-2 submenu. In the level-2 submenu, the user can review various temperature errors and alarm values.

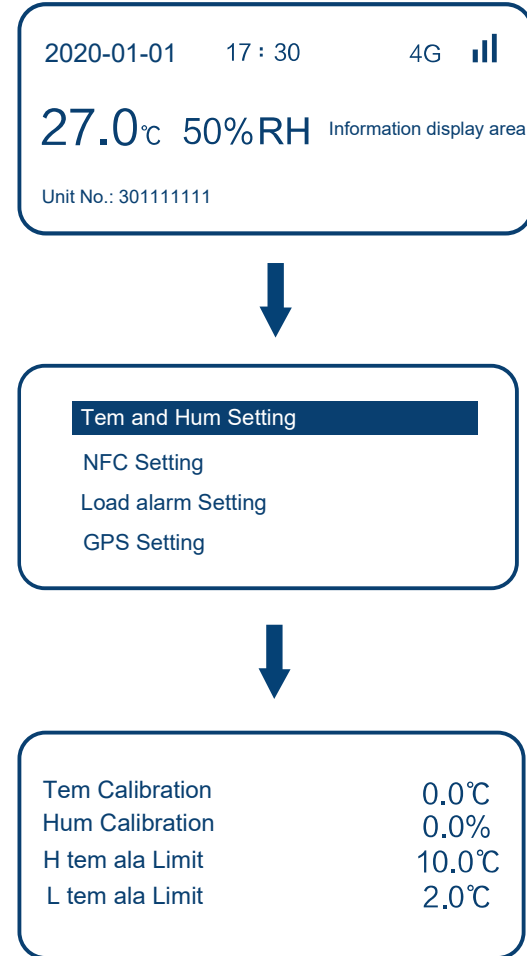

**Caution** The temperature error and temperature alarm values in the level-2 sub-menu cannot be adjusted by the user, but can be adjusted through the cloud platform background.